

The Transport Plus plan is the most important option for your vehicle....

It protects your investment against major repair expenses, while providing you with the following:

Cross Country Protection

*You are protected for authorized repairs anywhere in the United States and Canada. You have complete coverage with your 5 year/ 60,000 mile service plan even if you move or travel. The **Transport Plus Plan** plays directly to the participating dealer or authorized repair center. When necessary, we'll use corporate credit cards to guarantee immediate payment.*

Deductible

The Transport Plus Plan pays for all authorized repairs with only a \$100 deductible charge, per visit as per your contract.

Extend Plus Claims Service

All claims must be called in for prior approval. By calling our toll free number, you'll receive instant authorization of covered repairs via our Extend Plus Claims Service.

Extensive Coverage

With the Transport Plus Plan's extensive coverage, you are entitled to an unlimited number of authorized repairs up to the value of your vehicle.

**Protection Against Rising Labor
and Parts Costs**

The best part of being protected by the Transport Plus Plan is that you'll never have to worry about rising repair costs due to increasing parts and labor charges.

**Payment of Factory Power Train
Deductible**

The Transport Plus Plan will even pay the \$100 manufacturer's power train deductible as it applies to any covered mechanical breakdown.

Transport Plus



Extended Bus Warranty

For additional information about this warranty program, please contact:

Carpenter Bus Sales

132 Royal Oaks Blvd.
Franklin, TN 37067
(800)-370-6180

Carpenter Bus Sales

132 Royal Oaks Blvd.
Franklin, TN 37067
(800)-370-6180

Only Parts Listed Below are Covered:

GASOLINE ENGINE:

All internal lubricated parts including: pistons, piston rings and pins, crankshaft and main bearings, connecting rods and rod bearings, camshaft and bearings, pushrods, rocker arms, timing chain, belt and gears, valves, valve springs, seats and guides, valve push rods and lifters, followers, oil pump, mechanical and electric fuel pumps, gas fuel injectors and lines. Manifolds, flywheel, ring gear, flex plate, core plugs, harmonic balancer and bolt. Valve covers, timing cover, oil pan, vacuum pump, engine mounts and water pump, cylinder block, cylinder heads, engine control module. Radiator, radiator fan and fan clutch, cooling fan, motor and relay, water pump, thermostat (up to 60,000 miles), fuel tank. Also covered are turbo-charger housing, all internal parts and waste gate (with proper surcharge). Seals and gasket

DIESEL ENGINE:

All parts listed above for Gasoline Engine, plus diesel fuel injection pump, lines and injectors, lift pump.

TRANSMISSION:

All internal lubricated parts in the transmission case. Torque converter, bell housing, vacuum modulator, transmission mounts, transmission pan, speed sensor, governor assembly, transmission linkage, kick down linkage, transmission control module, cooler lines, transmission case (includes internal parts), seals and gaskets

4 WHEEL DRIVE:

Final drive housing and all internal parts, axle shafts, bearings, rear wheel and axle hub, bearings, front wheel, hubs, automatic front locking (four wheel drive), locking rings (four wheel drive), constant velocity and universal joints, seals and gaskets.

DRIVE AXLE:

All internal lubricated parts in the drive axle housing, axle shafts, differential cover, universal joints and yokes, constant velocity and double offset joints, axle wheel bearings, drive shaft center bearings, retainers, supports, propeller shafts, locking hub mechanisms. The drive axle housing is covered only if damaged by an internal lubricated part.

FRONT SUSPENSION:

McPherson struts, upper and lower control arms, control arm shafts and bushings, upper and lower ball joints, steering knuckles, spindles and spindle supports, wheel bearings and seals, stabilizer shaft, stabilizer linkage and bushings, king pins and king pin bushings. (front and rear) springs, (front and rear), load leveler suspension system.

STEERING:

Manual and power steering gear housing and all internal lubricated parts, control valve and cylinder, rack and pinion component, steering column, power steering pump and power cylinder, main and intermediate steering shafts and couplings, tie rod ends, idler arm, pitman arm, pulley assembly, cooler, seals and gaskets.

BRAKES:

Master cylinder, brake booster, calipers and wheel cylinders, combination valve, hydraulic lines and fittings, parking brake linkage and cables, self-adjusters, seals and gasket. Drums and rotors are covered when required in conjunction with repair to a covered part.

ABS BRAKES:

Antilock brakes, module, pump motor assembly, sensors, switches and relays, seals and gaskets.

EMISSIONS:

Oxygen sensors, TP sensor, MAF sensor, EGR control valve, idle air control valve, EVAP vapor storage canister, knock sensor, coolant temperature sensor.

HEATER & AIR CONDITIONING:

(front and rear)

A/C compressor, A/C clutch, A/C clutch bearings, field coil, A/C accumulator, condenser, evaporator, A/C compressor/clutch switch, automatic temperature control, heater core assembly, heater blower motor, heater control cables, idler pulley, belt tensioner, hoses and lines, heater valves, expansion valves, seals and gaskets.

ELECTRICAL:

Alternator, starter motor and solenoid, voltage regulator, charge & volt gauges, distributor, wiring harnesses, (excluding spark plug wires), manual switches, windshield wiper motor and washer pump, power window motors and regulators, convertible top motor, automatic temperature control, keyless receiver/module, power seat motors and adjusting mechanisms, ignition control systems, engine control module, mirrors, motorized (electrical only-not glass/housing damage or breakage), horn, gauges, electric clock, electronic air suspension, (selected components), antitheft alarm (factory installed), electronic instrument cluster, (excluding dash pad), power antenna (excluding mast), power door lock actuators (excluding door handles), cruise control, body control module.

BUS BODY:

Passenger entry door motor, module, actuator arms, adjusting rods, (including Heim joints), header assembly, wheel chair & ready entry door handles, hinges & hydraulic door openers, cargo door handles, window seals, egress window handles, T-slider handles, (glass breakage is not covered), seat frames, seat sliders & knobs, recline mechanisms & recliner handles (if equip), normal wear & occupant damage is not covered. LED lighting (interior & exterior), any non LED light is excluded, interior trim panel, headliner, switch panel, circuit board, cargo wall & nets and hardware, wheel chair lifts.

Fluids, filters and lubricants are not covered, except when required in connection with the repair or replacement of covered parts.